
GK14 - SIMPLIFIED INSTALLATION

LM-AL-GK14-2M / C15 opal diffuser / 2 m profile

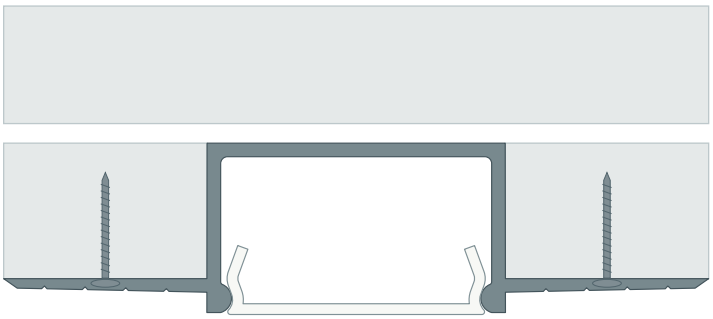

Unlit installation section. Illustrative substrate; not to scale.

CHECK BEFORE CUTTING

HEIGHT	12.5 mm
INNER CHANNEL	20 mm
DIFFUSER	C15 opal

Use the actual profile to check the recess and finishing allowance. Plan cable entries and driver access before cutting. Disconnect power before fitting or servicing.

01 PLAN AND DRY-FIT

Mark the route and cable access. Cut and deburr the empty profile and diffuser. Remove swarf and check the actual parts against the board opening and finished surface.

02 FIX THE PROFILE

Secure the perforated wings to a suitable supported substrate with appropriate fixings. Keep the profile straight and the diffuser seat clear.

03 FINISH THE WINGS

Protect the channel while finishing over the perforated wings. Keep compound, paint and dust out of the channel and cover seat. Allow the finish to cure.

04 FIT LED AND DIFFUSER

Clean and dry the bed, fit the selected strip and route the cable safely. Fit matching end caps, then press the C15 cover evenly into its click seat. Connect and test to the LED system instructions.

LUMENO CUT AND PRE-WIRED SERVICE

For best results, order tailored and pre-wired cuts from Lumeno. Contact support@lumeno.ie or +353 91 766803 to discuss the profile, strip and cable route.